



ASUS 4G-N16 wireless router Gigabit Ethernet Single-band (2.4 GHz) Black



Model: 90IG07E0-MO3H00

Manufacturer: ASUS

EAN: 4711081469490

Product Code: 1439675

R2,109

Unleash your internet with ultra-fast 4G LTE!

ASUS 4G-N16 is no ordinary Wi-Fi router. Just insert a 4G LTE SIM card and its built-in modem connects to the internet wirelessly via super-fast mobile broadband. You can enjoy up to 150 Mbps downloads and 50 Mbps uploads.

5.3X Faster 4G LTE speed

With 4G-N16, you'll appreciate the blistering speed of the 4G LTE mobile broadband technology, especially if you live out of reach of conventional broadband. It's capable of up to 150 Mbps downloads and 50 Mbps uploads.

The product information provided is for reference purposes only. Technical specifications, photos, descriptions and prices may change without prior notice. The manufacturer and seller are not responsible for possible data discrepancies or typographical errors. We recommend checking the current information before purchasing.

itworkup.co.za | sales@itworkup.co.za | +27 (11)541-9950

Cable-free 3G/4G WAN and 300 Mbps Wi-Fi

Enjoy the cable-free convenience of 4G LTE mobile broadband! 4G-N16 has a built-in SIM card slot that lets you share a mobile broadband connection via 300 Mbps Wi-Fi anywhere in the home or office. Surf the web, download apps, stream media and more — with no messy cables!

The true wireless network where you need it

4G-N16 offers unparalleled convenience of use. Long-term tests guarantee wide compatibility and reliability. Just insert a SIM card and enjoy the convenience of 3G/4G mobile broadband connection anywhere for home and SOHO with less mess of cable.

Detachable and upgradeable 4G LTE antennas

External mobile broadband antennas perform better than internal antennas. Indoors, the best 4G LTE reception is usually found near a window, but if this isn't practical you can easily add an antenna extension cable thanks to the detachable antennas.

Easy Plug-n-Surf

It only takes two steps to get connected with 4G-N16:

1. Insert your 4G LTE SIM card and turn on the 4G-N16. (*Make sure your device is powered off before you insert a SIM card.)
2. It will connect automatically to the appropriate mobile network. You're connected!

The product information provided is for reference purposes only. Technical specifications, photos, descriptions and prices may change without prior notice. The manufacturer and seller are not responsible for possible data discrepancies or typographical errors. We recommend checking the current information before purchasing.

itworkup.co.za | sales@itworkup.co.za | +27 (11)541-9950