

Bosch 2 607 010 630 jigsaw/scroll saw/reciprocating saw blade



Model: 2607010630

Manufacturer: BOSCH

EAN: 3165140579360

Product Code: 1477348

R884

T 119 BO Basic for Wood / T 119 B Basic for Wood / T 111 C Basic for Wood / T 218 A Basic for Metal /
T 118 G Basic for Metal / T 118 A Basic for Metal / T 118 B Basic for Metal.