

Bosch 2 607 010 631 jigsaw/scroll saw/reciprocating saw blade



Model: 2607010631

Manufacturer: BOSCH

EAN: 3165140579377

Product Code: 1501520

R1,008

T 218 A Basic for Metal / T 118 G Basic for Metal / T 118 A Basic for Metal / T 118 B Basic for Metal.