

**Bosch EasySaw
18V-70 power
jigsaw 2600 spm
1.3 kg**



Model: 0603012000

Manufacturer: BOSCH

EAN: 4053423229912

Product Code: 1664934

R1,962

Bosch Home and Garden EasySaw 18V-70 Akku-Stichsäge 0603012000 ohne Akku 18 V 0 Ah
(0603012000)