

Ryobi ONE+ RY18CS20A-0 18V Chainsaw 20cm No Battery



Model: 5133005414

Manufacturer: RYOBI

EAN: 4892210199515

Product Code: 469121

R3,321