



18V ONE+ OCS1830 RYOBI chainsaw



Model: 5133002829

Manufacturer: RYOBI

EAN: 4892210147820

Product Code: 608258

R3,735

Warnings: Keep the unit away from sources of heat and fire. | Vibration level: 6.6 m/s² | Product colour: Black | Chain pitch: 9.53 / 0.375 mm (0.375 / 0.375") | Chain speed: 10 m/s | Sound power level : 94.1 dB(A) | Battery included: No | Product colour: Green | Power source: Battery | Warnings: Use appropriate protective equipment such as gloves and safety glasses. | Warnings: Do not dispose of used batteries in the normal waste stream hand them in at a designated collection point. | Input voltage: 18 V | Chain bar length: 30 cm | Charger: No | Weight: 3.2 kg | Engine type: Brushless motor

The product information provided is for reference purposes only. Technical specifications, photos, descriptions and prices may change without prior notice. The manufacturer and seller are not responsible for possible data discrepancies or typographical errors. We recommend checking the current information before purchasing.

itworkup.co.za | sales@itworkup.co.za | +27 (11)541-9950