

18V ONE+ OCS1830 RYOBI chainsaw



Model: 5133002829

Manufacturer: RYOBI

EAN: 4892210147820

Product Code: 936065

R3,722

Battery included: No | Weight: 3.2 kg | Product colour: Black | Chain bar length: 30 cm | Charger: No | Chain pitch: 9.53 / 0.375 mm (0.375 / 0.375") | Input voltage: 18 V | Engine type: Brushless motor | Product colour: Green | Chain speed: 10 m/s | Vibration level: 6.6 m/s² | Power source: Battery | Warnings: Use appropriate protective equipment such as gloves and safety glasses. | Warnings: Do not dispose of used batteries in the normal waste stream hand them in at a designated collection point. | Warnings: Keep the unit away from sources of heat and fire. | Sound power level : 94.1 dB(A)